18" Scrubber Adjustment Handle Setting Instructions

Condition	Method of Adjusting handle	Condition Explanation
1		To set for the proper floor condition You will need to adjust the red knob to increase or decrease the amount of pad pressure. To loosen the red knob for adjustments, there is a jam nut located below the Red knob thats needs to be loosened to allow the Red knob to turn. Use a 17mm Spanner wrench. After proper pressure has been set ,tighten the jam nut so the red Knob will not move during operation.
2		For VCT tile and smooth floors you can turn the knob for increased pad pressure if needed. The more pressure there is the harder the scrubber will push. Do not use the heavy setting for Rubberized flooring or non slip surfaces as this will overload the brush motor.
3		For Rubberized flooring, non Slip surfaces and rough Floors. Please Adjust to a Lighter pad pressure setting.