

Dura 18HD scrubber switch replacement

Part Number:8014006

Tools Needed:


- Philips head screwdriver
- Masking tape
- Pen or something to write with
- New switch (8014006)




- Start by removing the 4 Philips screws holding the front panel on



- Once removed, locate the back of the switches (8014006)

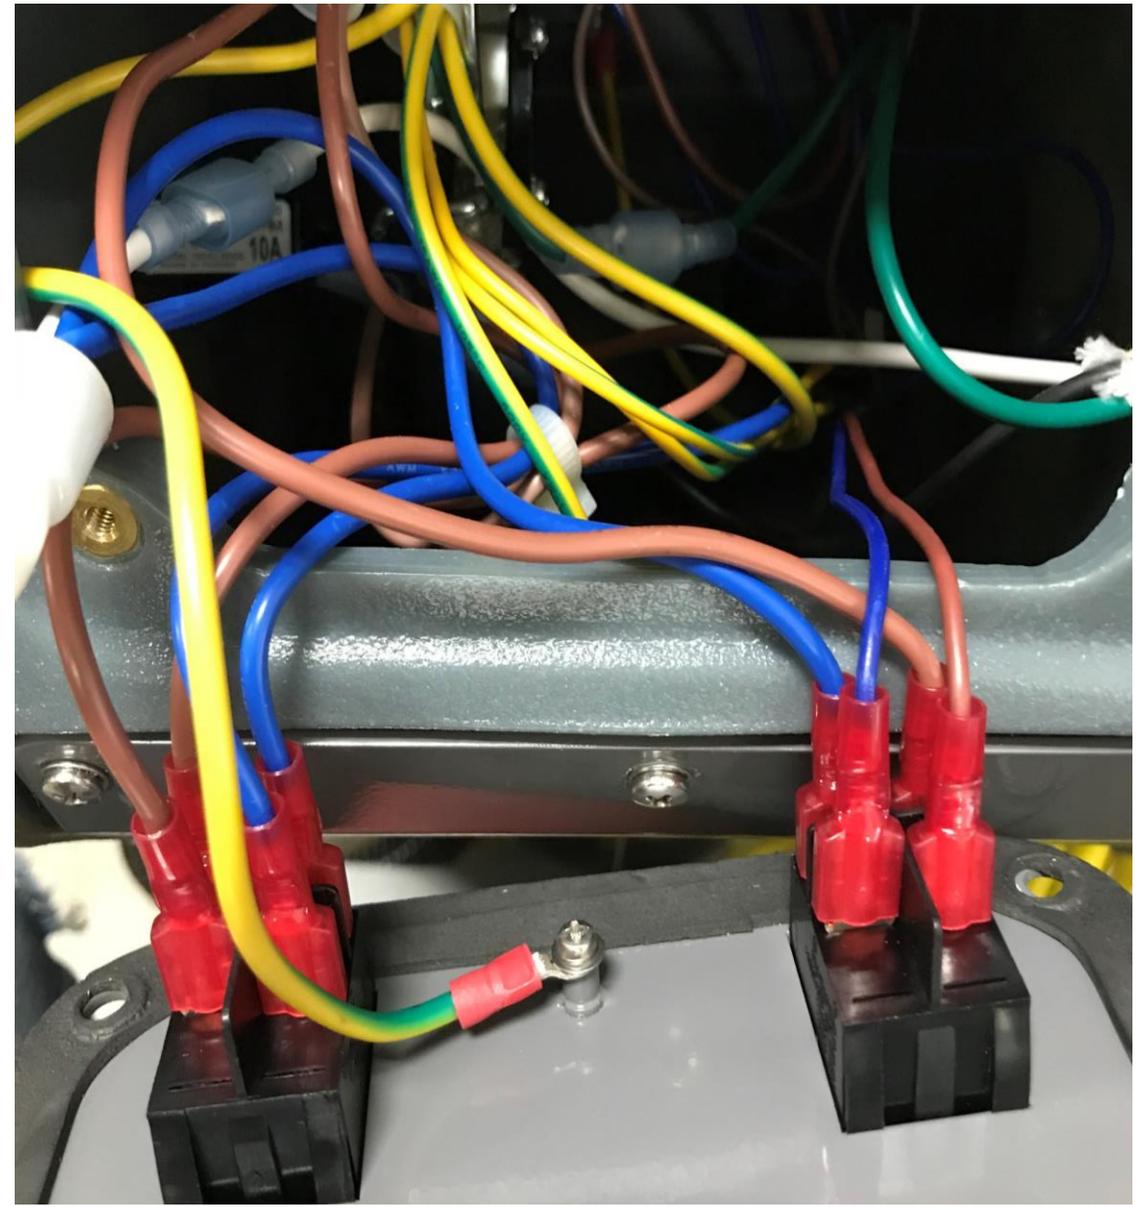


- Add a piece of masking tape to each wire for future reference, label the corresponding wires in numerical order as shown in the picture

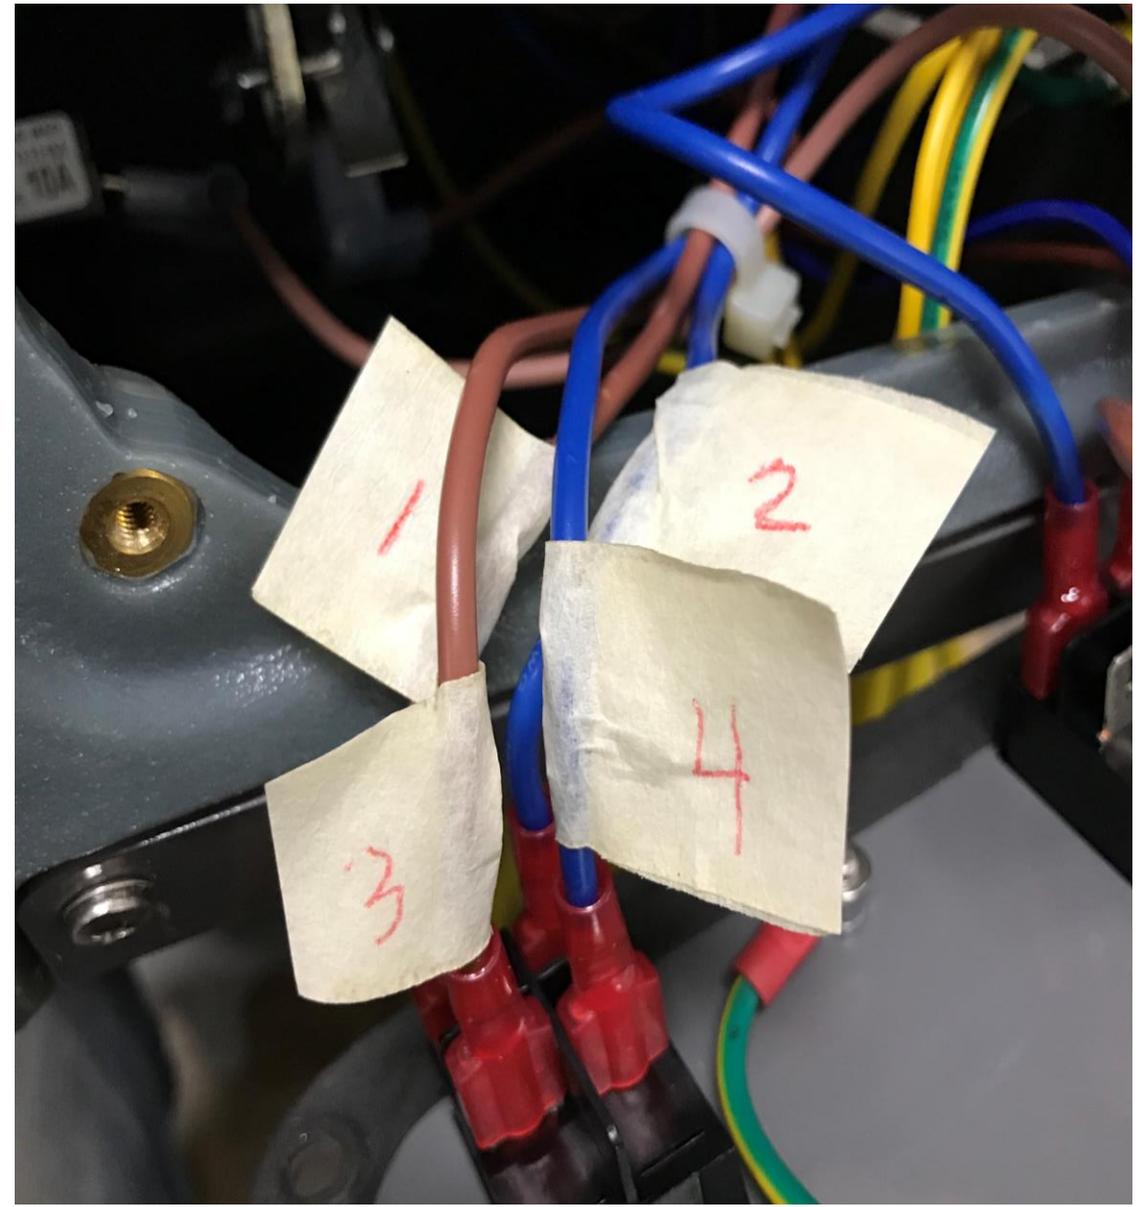


- After labeling each wire, remove the wires carefully, remembering where each wire goes

****The wire MUST go back to the original terminal of which it was pulled off from****

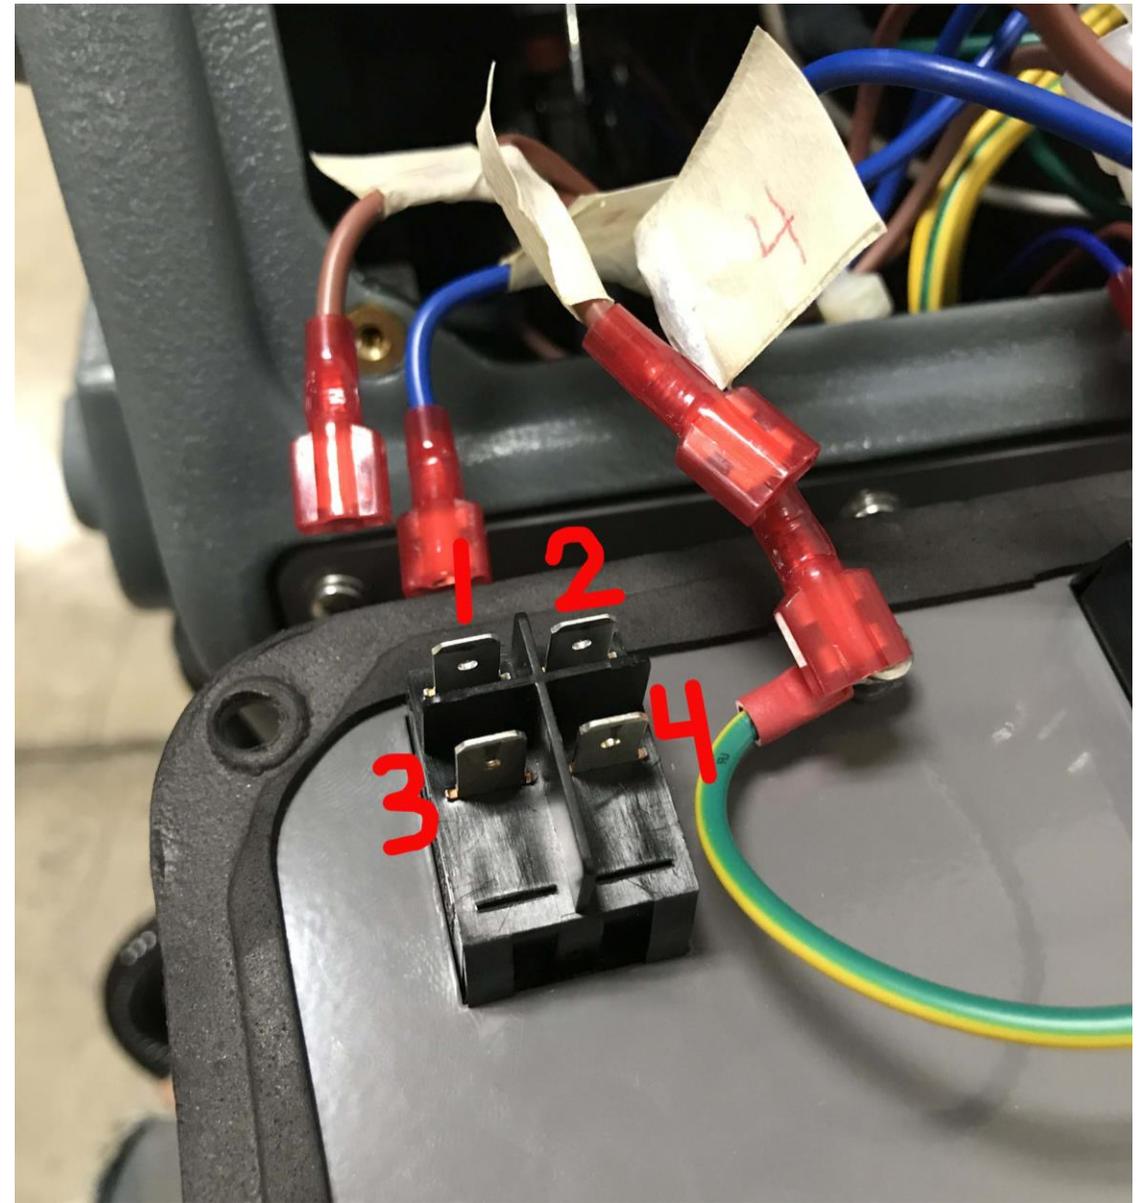

- Push the clip, on each side that holds the switch on the plate

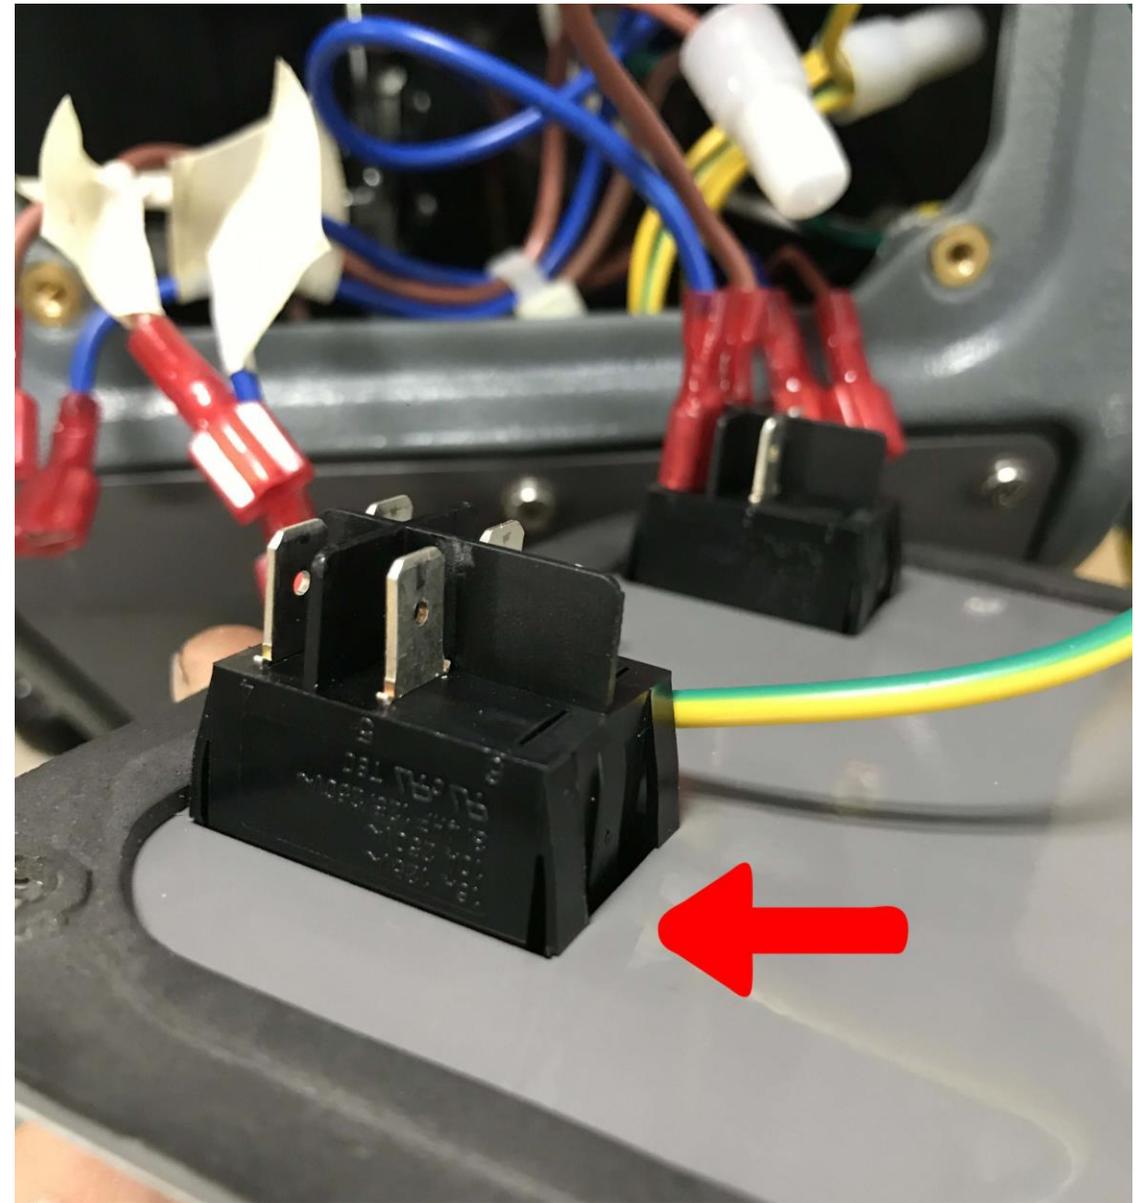


- Pull the old switch out and replace with a new switch




- Part number: 8014006




- Insert the new switch into the control panel

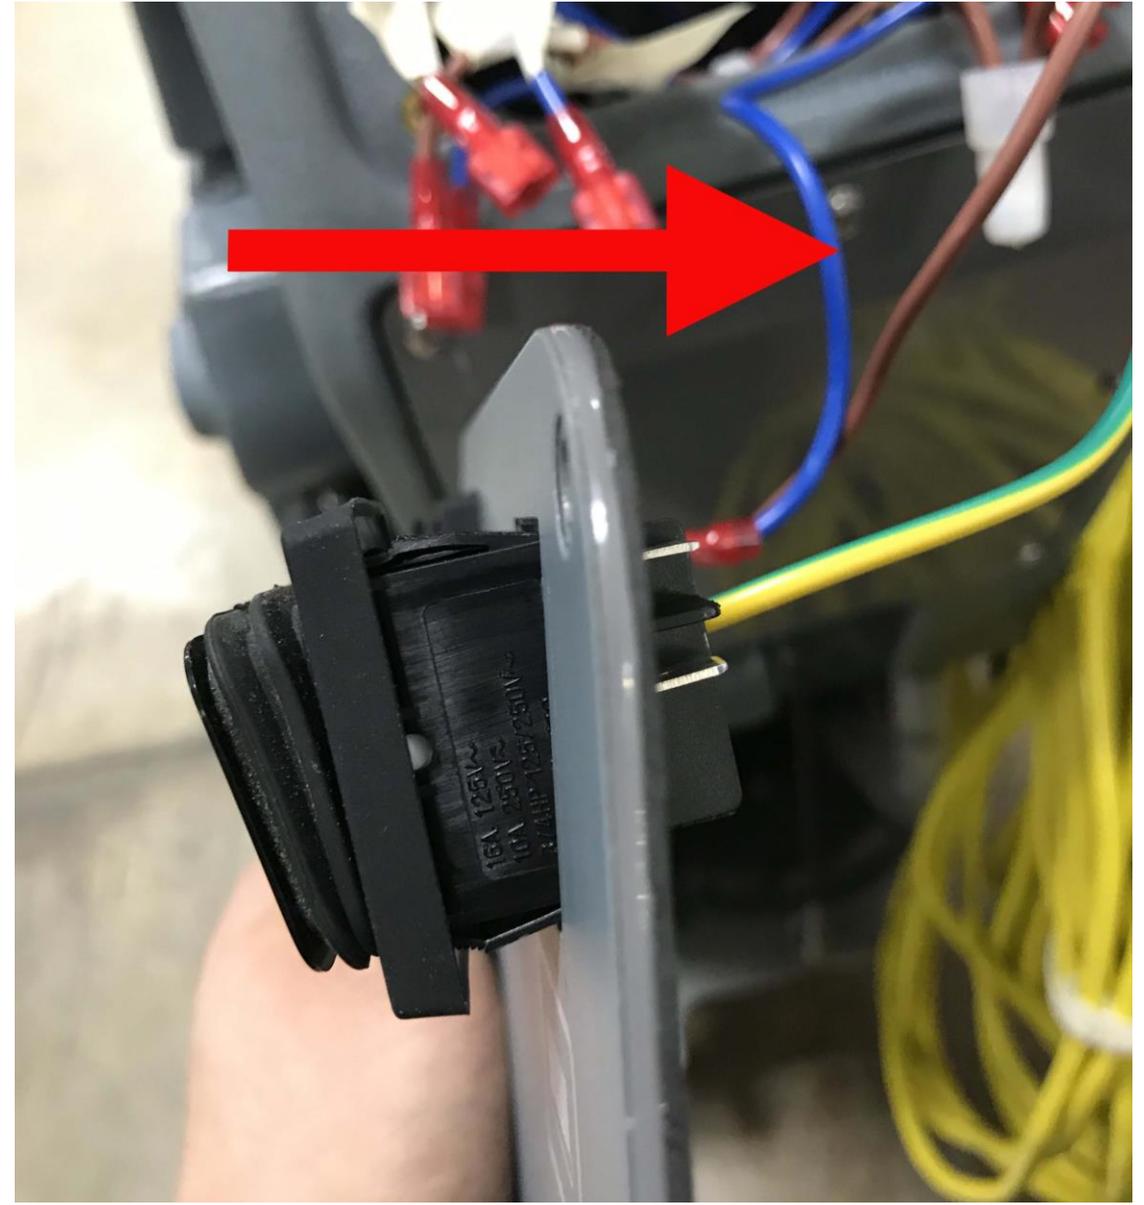

- Plug the correct wires back into the terminals of the switch

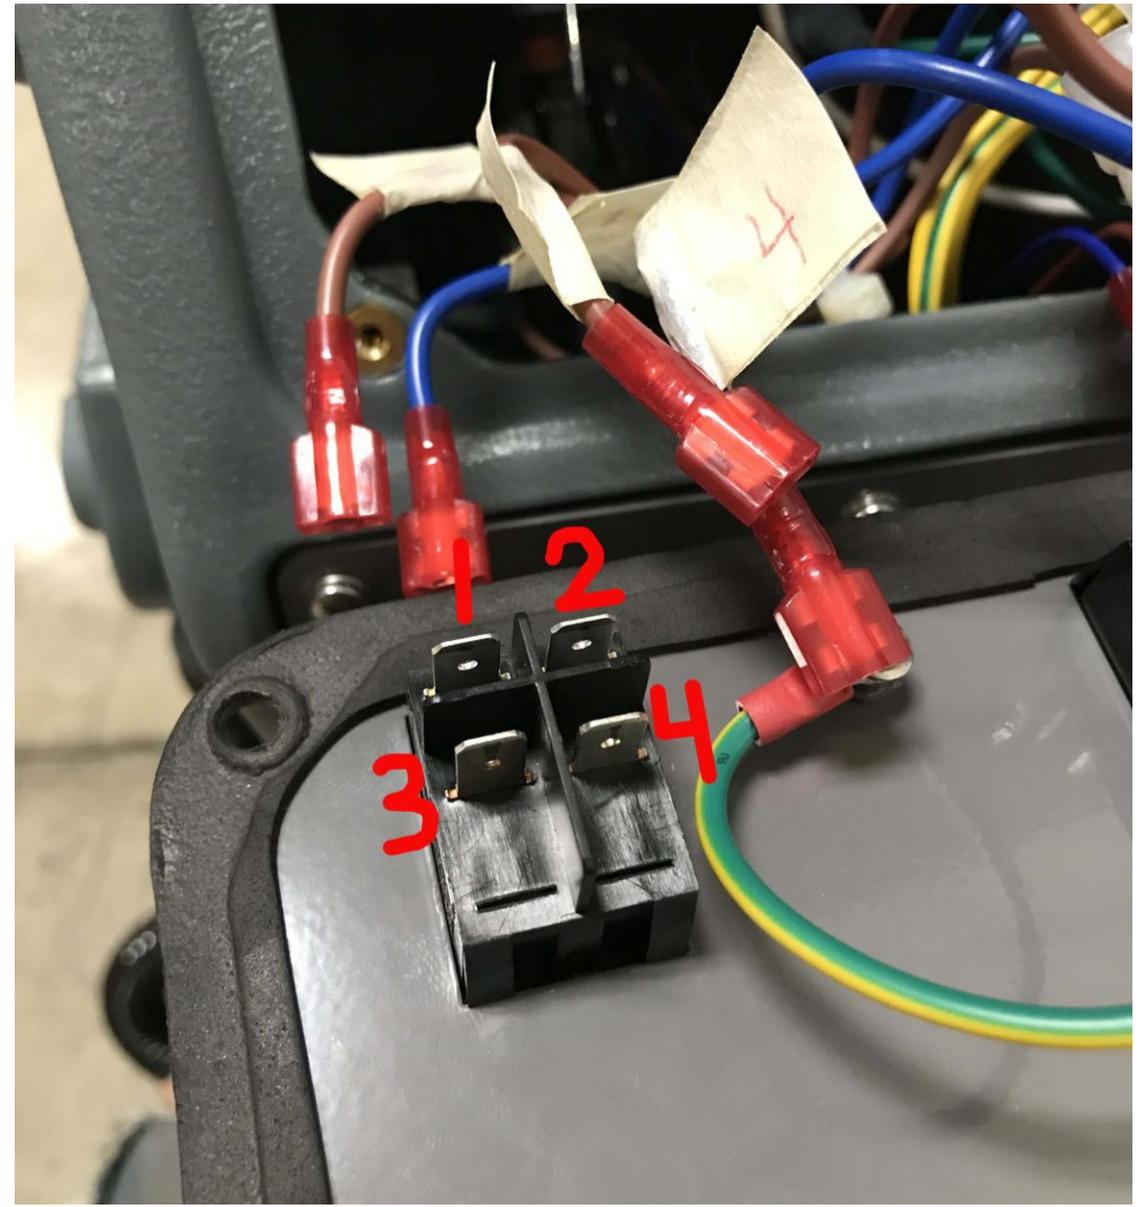

- Once all are plugged in re-install the control panel

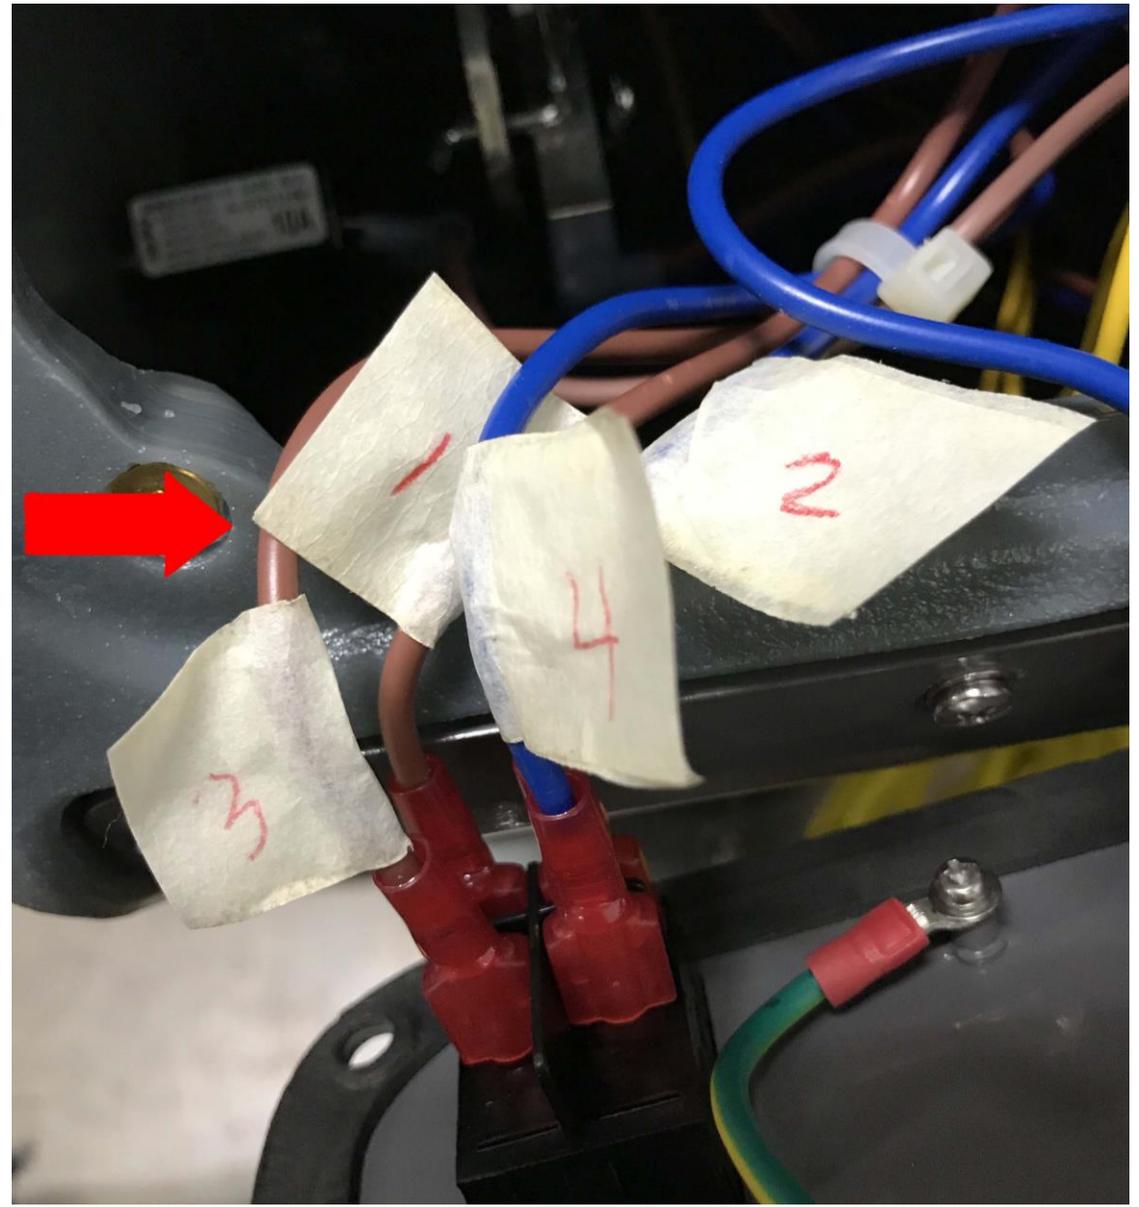

- Screw in the 4 screws holding the control panel on



ALL DONE!

